

myWall space

ECO PASTED TERRALON WALLPAPER (needs paste)

My Wall Space Pasted Terralon Wallpaper comes in two finishes Smooth and Lightly Textured and is our Commercial Grade Type 2 wallpaper.

Sustainable Benefits

Dream Scape's sustainable wallcovering product, Terralon, has been an industry-leading, PVC-free vinyl alternative for some time.

Terralon is made from 31% post-consumer recycled content and is highly breathable, the Earth-friendly product has resulted in the repurposing of over 12 million plastic bottles since its introduction, and that number is constantly increasing.

Recycled content and PVC-free materials

Digitally printed using HP latex inks, which are Eco logo and Green Guard Gold certified



The environmental performance is the recyclability of used HP consumables. All HP 831 printing supplies—including ink cartridges, printheads, and maintenance supplies are recycled through the HP Planet Partners program.

Benefits

Exceptional printability and durability

Has a smooth light, textile emboss Architectural finish

Permanent adhesion after drying

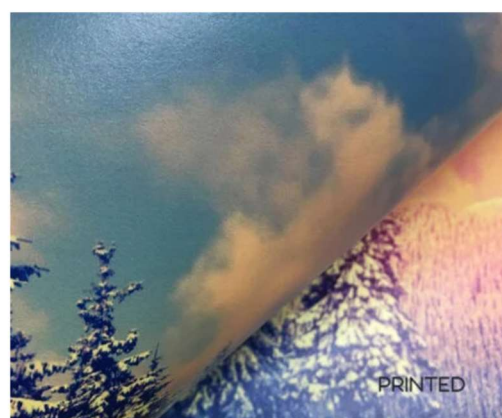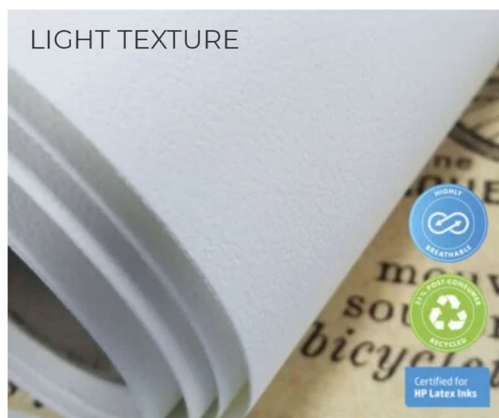



Terralon Wallpaper is a highly permeable wallcovering and should be installed with a heavy-duty adhesive and primer with mould and mildew inhibitors.

For best results, we recommend a clay-based adhesive. Manufacturers such as Roman Decorating and Zinsser offer permeable adhesives and primers with advanced mould and mildew protection.

Please check with these manufacturers for their latest products. Roman Eco brand primers and adhesives are recommended for compliance with NSF-342 sustainability.

ADHESIVE APPLICATION - Do not dilute adhesive. Brush an even coat of paste over entire back of wallcovering. Gently double material together and “book”. Do not fold or crease booked material.

For damaged walls use a water-based primer/sealant prior to installation, we recommend the Zinsser product range available from most paint and hardware stores. www.rustoleum.com.au

Wash off excess paste from face of wallcovering as you hang it with a cellulose sponge. The cellulose sponge must be rinsed in clean water after every use. Blot dry with a clean cloth.

Do not install wallcovering unless a temperature above 20 degrees Celsius is maintained in both areas of installation and storage for at least 48 hours prior to installation.

It is essential to ensure the walls are wiped clean and free from dust and dirt.

My Wall Space Advice for Extra Protection for High Traffic Areas

We recommend contacting VIPONDS Paint in Victoria for liquid laminating products for custom printed wallpaper using HP Latex Inks.

Please contact us if you need help